

# IMPELLER ADJUSTMENT INSTRUCTIONS

**CAUTION !** Improper Adjustment Of A New Burks Turbine Pump Will Invalidate The Warranty.

1. Turn the pump off and disconnect the power. 2. Remove the cover of the pump. 3. Inspect the impeller for damage or wear. 4. Adjust the impeller clearance to the recommended specification. 5. Reassemble the pump and test the operation.